



# FINTIN V1 USER MANUAL




Welcome to FINTIN V1.  
Before using it, let's learn about the basic grip posture. Make sure that the side with many buttons faces the ceiling. And secure the charging port toward the body.

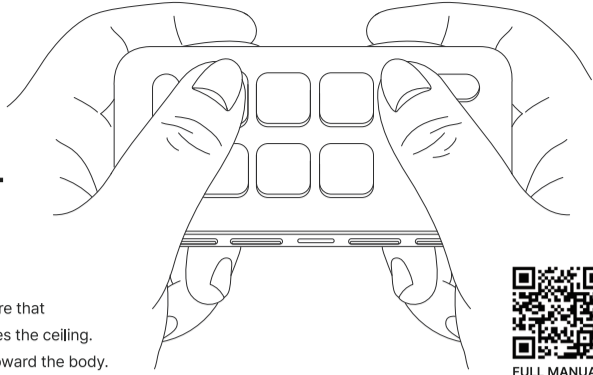

## ① Button Guide

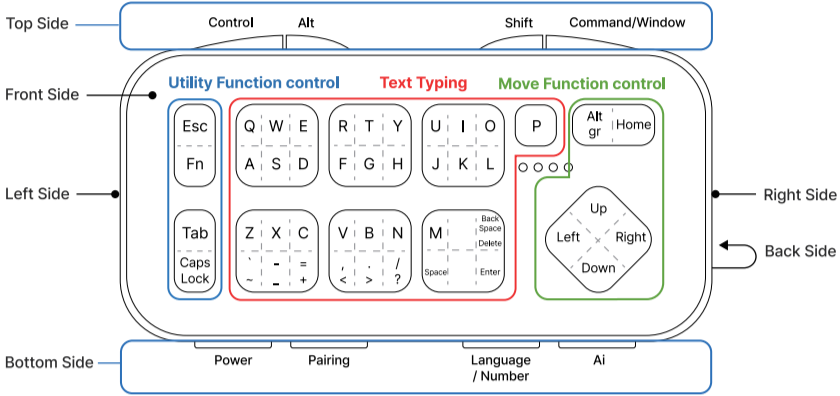

## ② Bottom Side Button

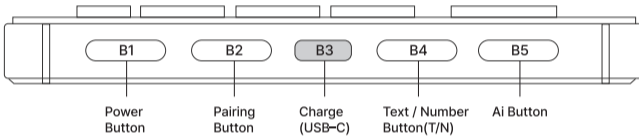

### B1

- Power ON/OFF = Long Press(3sec)
- Sleep = Click x 2
- Wakeup: Click x 1
- Battery Check = Click x 1

\* Please refer to page ③

### B2

- Pairing Connect = Long Press(3sec)
- Pairing Status Check = Click x 1
- Multi Pairing = 1~4CH Connectable

\* Please refer to page ④

### B4

- Text / Number(T/N)
  - Check = Click x 1
  - Change = Click x 2
- \* Please refer to page ⑦, ⑧
- OS(iOS / Android)
  - Check = Fn + Click x 1
  - Change = Fn + Click x 2

\* Please refer to page ⑨, ⑩

### B5

- Ai ON/OFF = Click x 1 (Later)
- iOS : Siri
- Android : Google Assistant
- Windows : Copilot

## ③ Power Button(B1)



### 1. Power ON/OFF : Long Press(3sec)

	LED Signal	Vibration
Power ON	●○○○ For 2sec	Long x 1
Power OFF	●●●●	Long x 3

### 2. Sleep / Wake up : Click x 2

	LED Signal	Vibration
Sleep	●●●●	Long x 2
Wake up	●○○○ For 2sec	Long x 1

### 3. Battery Check : 'Click x 1' or 'Charging'

LED Signal	Vibration	Status
●○○○ For 1sec	Short x 3	High
●○○○ For 1sec	Short x 2	Middle
●○○○ For 1sec	Short x 1	Low
●○○○ Every 3min	Double Haptic (Every 3min)	Discharge Warning

\*Discharge warning starts automatically

## ④ Pairing Button (B2)



 
### 1. Pairing Connect

- (1) Prepare for a new connection:  
Pairing Reset = Long Press(3sec)
- (2) Go to the smartphone setting and proceed with the Bluetooth connection.

✔ If there is a device that was connected before, it will connect automatically.

### 2. Multi Pairing (Connectable up to 4 devices)

- (1) Channel Select = B2 + Arrow Button(←, ↑, →, ↓)
- (2) Run No.1. (follow the '1. Pairing Connect' steps.)



### 3. Pairing Status Check(LED & Vibration) : Click x 1

Connecting Sign	Channel & Connecting Sign
● Connected	① Connected
○ Disconnect	② Disconnect
●○○○	③ Disconnect

LED Signal	Vibration	Status
●○○○	Short x 1	Ch1. Connected
●○○○	Short x 1 & Long x 2	Ch1. Disconnect
●○○○	Short x 3	Ch3. Connected

\* Please refer to <https://fintin.co.kr/support>

## ⑤ FAQ

**Q1. 'The shortcut key does not work' or 'Entered text but numbers are inputted(including opposite symptoms)' or 'When the symptom of no response when pressing the button' occurs.**

- ① This could be a 'pairing issue'. → First, check the status of the pairing connection, and if there are issues with the connection, proceed with re-pairing.(Please refer to page ④)
- ② This could be a 'OS mismatch'(Phone vs FINTIN V1).  
→ First, check the current OS settings, and if the OS is mismatched, proceed with OS reconfiguration.(Please refer to page ⑨, ⑩).  
If the OS settings of your phone and FINTIN V1 are different, the following buttons may not function properly.  
'Text/Number Key Map - 'ESC(Back function)', 'HOME move', 'AI Call function'  
'Fn Key Map - 'Screen Reader', 'Keyboard Hide', 'Screen Lock', 'Magic Tab', 'Screen Curtain', 'Pause/Play'
- ③ This could be a 'T/N Mode Setting issue'.  
→ First, check the current 'T/N Mode', and then proceed to set the desired 'T/N Mode'.(Please refer to page ⑦, ⑧)
- ④ Reset: If unresolved even after proceeding with steps ① to ③. → It is recommended to proceed with the 'rebooting' by long pressing (3 sec) both the 'B1' Button and 'B2' Button together."



**Q2. The buttons that need to press the 'top center' or 'bottom center' at the same time, such as 'W', 'T', and 'I', are not well entered.**  
→ Press with the feeling of pressing the left and right corners simultaneously, centering on the center of each button (see Page ⑥)

**Q3. How do you "initialize the factory" ?**

- You can proceed with 'factory initialization' by pressing and holding the 'B4' button and the 'B5' button for 3 seconds.

\* If you have any 'other inquiries' while using the product, please send them by E-mail. [contact@onecommu.com](mailto:contact@onecommu.com)

## ⑥ Button Press Point

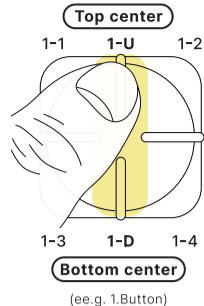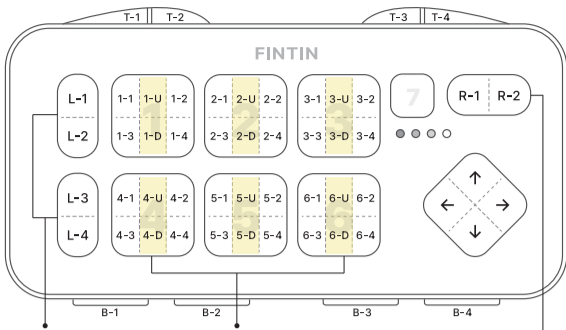


Each of the two left Buttons has two press points, one up and two down

Each Text Button from 1 to 6 has six press points.

There are a total of 2 press points on the left/right for one Right Button.


Yellow push points refer to pressing the 'top center' or 'bottom center' of each Button.

## ⑦ Text Mode

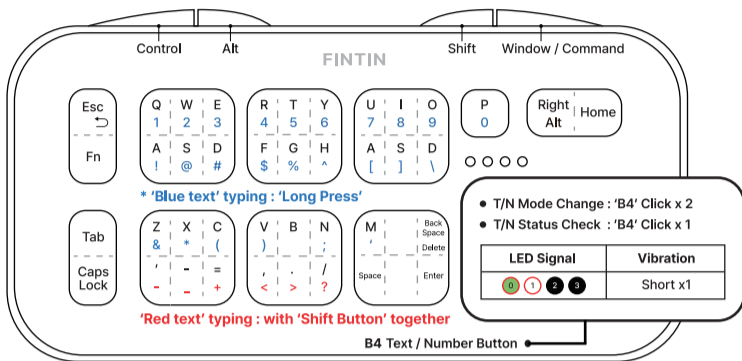


\* OS Setting Check : There is a Button that does not work properly, if the OS of 'Phone' and 'FINTIN V1' are not the same.  
(e.g.)Text / Number Mode: 'ESC', 'HOME', 'AI'. → Take Action: OS Setting & Change (Please refer to page⑥)

## ⑧ Number Mode

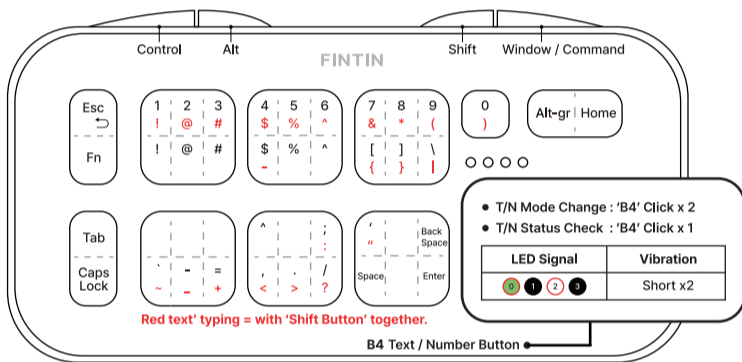


\* OS Setting Check : There is a Button that does not work properly, if the OS of 'Phone' and 'FINTIN V1' are not the same.  
(e.g.)Text / Number Mode: 'ESC', 'HOME', 'AI'. → Take Action: OS Setting & Change (Please refer to page⑥)

## ⑨ Fn Button (Android)

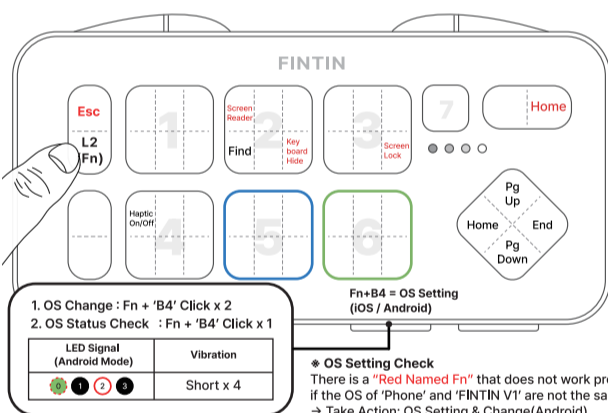


### Fn + No.5 Button

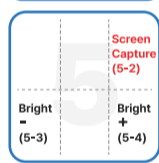


### For Screen

### Fn + No.6 Button

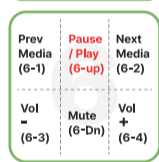


### For Media

## ⑩ Fn Button (iOS)

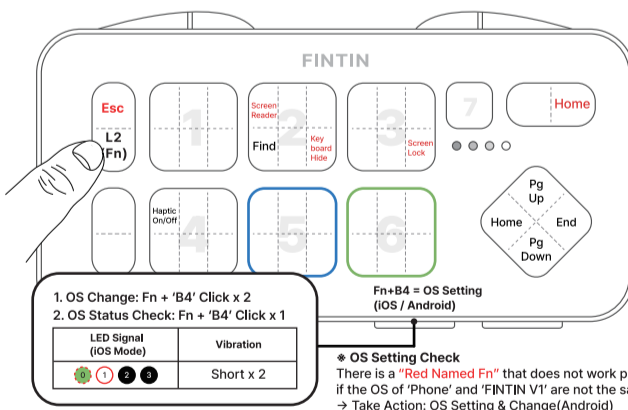


### Fn + No.5 Button

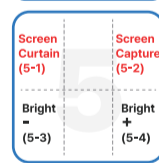

### For Screen

### Fn + No.6 Button

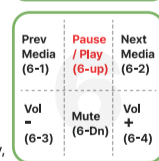

### For Media

## ⑪ Safety and Precautions for Use

### - Charging and storage

For our products with built-in batteries, using a charger that exceeds the specified rated voltage capacity and a charger that lacks official fast charging certification during charging can damage the battery and circuit board, potentially causing a fire. Additionally, if the discharge time increases, battery performance can deteriorate. Avoid prolonged exposure to direct sunlight and store in a cool place. Please charge and store in a safe environment.

### - Caution for long-term use

Long-term use of the product can put a significant strain on your hands, arms, neck, shoulders, waist, etc. If you experience discomfort, fatigue, pain, or muscle stiffness, please stop using it immediately and avoid using the product for extended periods. Also, take appropriate breaks regularly during use.

### - About product handling

Please exercise caution when using this product, as it may fall and malfunction. This product is a precision device containing an electric circuit and a transformer. It is important to prevent drinks, liquids, or any foreign substances from entering the interior. And abnormal use, such as twisting or bending the product, is strictly prohibited.

### - Do not disassemble

Please do not arbitrarily disassemble, repair, or modify the product. There is a risk of cuts to the hands or electric shock, and it can cause issues with key input. Even within the warranty period, costs may be incurred for repairs and exchanges due to user fault. If the user directly disassembles & assembles or arbitrarily modifies the product, you cannot receive A/S related services provided by the manufacturer/distributor regardless of the warranty period.